

## PMBus Command Set

### Commands

Code	Name	# bytes	R/W	Format	Resolution	Range
01	OPERATION	1	R/W			
02	ON_OFF_CONFIG	1	R/W			
03	CLEAR_FAULTS					
10	WRITE_PROTECT		R/W			00, 20, 40, 80
15	STORE_USER_ALL					
16	RESTORE_USER_ALL					
19	CAPABILITY	1	Read	Return B0		
1B	SMBALERT_MASK		Write word / Block read process call			
20	VOUT_MODE	1	R	Return 98		
21	VOUT_COMMAND	2	R/W	L16	1/256	
24	VOUT_MAX	2	R/W	L16	1/256	
25	VOUT_MARGIN_HIGH	2	R/W	L16, 1.3 relative format	1/256	
26	VOUT_MARGIN_LOW	2	R/W	L16, 1.3 relative format	1/256	
27	VOUT_TRANSITION_RATE	2	R/W	L11	0.25 mV/ $\mu$ s	0-31.75 mV/ $\mu$ s
29	VOUT_SCALE_LOOP	2	R/W	L11	1, 0.5	
35	VIN_ON	2	R/W	L11	0.5 V	0 to 15.5 V
36	VIN_OFF	2	R/W	L11	0.5 V	0 to 15.5 V
39	IOUT_CAL_OFFSET	2	R/W	L11	1/16 A	$\pm$ 8 A
40	VOUT_OV_FAULT_LIMIT	2	R/W	L16, 1.3 relative format	5%	5% to 20%
41	VOUT_OV_FAULT_RESPONSE	1	R/W	L16		00, 80, C0
42	VOUT_OV_WARN_LIMIT	2	R/W	L16, 1.3 relative format	1/256	
43	VOUT_UV_WARN_LIMIT	2	R/W	L16, 1.3 relative format	1/256	
44	VOUT_UV_FAULT_LIMIT	2	R/W	L16, 1.3 relative format	1/256	
45	VOUT_UV_FAULT_RESPONSE	1	R/W	L16		00, 80
46	IOUT_OC_FAULT_LIMIT	2	R/W	L11	0.5 A	4.5 A to 20 A
47	IOUT_OC_FAULT_RESPONSE	1	R/W			C0, F8
4F	OT_FAULT_LIMIT	2	R/W	L11	1 °C	150 °C max
50	OT_FAULT_RESPONSE	1	R/W			00, 80, C0



Code	Name	# bytes	R/W	Format	Resolution	Range
55	VIN_OV_FAULT_LIMIT	2	R/W	L11	1 V	18 V max
56	VIN_OV_FAULT_RESPONSE	1	R/W			00, 80
58	VIN_UV_WARN_LIMIT	2	R/W	L11	0.5 V	0 to 15.5 V
5E	POWER_GOOD_ON	2	R/W	L16, 1.3 relative format	1/256	5% to 20%
60	TON_DELAY	2	R/W	L11	0.5 ms	0 to 127.5 ms
61	TON_RISE	2	R/W	L11	0.25 ms	0 to 127.75 ms
62	TON_MAX_FAULT_LIMIT	2	R/W	L11	0.25 ms	0 to 127.75 ms
63	TON_MAX_FAULT_RESPONSE	1	R/W	L16		00, 80
64	TOFF_DELAY	2	R/W	L11	0.5 ms	0 to 127.5 ms
65	TOFF_FALL	2	R/W	L11	0.25 ms	0 to 127.75 ms
78	STATUS_BYTE	1	R			
79	STATUS_WORD	2	R			
7A	STATUS_VOUT	1	R/W			
7B	STATUS_IOUT	1	R/W			
7C	STATUS_INPUT	1	R/W			
7D	STATUS_TEMPERATURE	1	R/W			
7E	STATUS_CML	1	R/W			
88	READ_VIN	2	R		1/16	
8B	READ_VOUT	2	R		1/256	
8D	READ_TEMPERATURE	2	R		1	
98	PMBUS_REVISION	1	R			
99	MFR_ID	4	Block R/W			
9A	MFR_MODEL	2	Block R/W			
9B	MFR_REVISION	2	Block R/W			
AD	IC_DEVICE_ID	2	Block R/W			
AE	IC_DEVICE_REV	2	Block R/W			

## IMPORTANT NOTICE AND DISCLAIMER

TDK PROVIDES THIS POWER DESIGN USER GUIDE (“Resources”) “AS IS” AND WITH ALL FAULTS, AND DISCLAIMS. ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These Resources are intended for skilled developers designing with TDK products. You are solely responsible for (1) selecting the appropriate TDK products for your application, (2) designing, validating and testing your application, (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements, and (4) ensuring your application complies with all applicable laws and regulations. These Resources are subject to change without notice and TDK assumes no responsibility for any notices or lack thereof. TDK grants you permission to use these Resources solely for development of an application that uses the TDK products described in the Resource.

This permission may be revoked at any time by TDK or any of its affiliates. Your use of these Resources shall be in compliance with all applicable laws and regulations including applicable export/import controls. Reproduction and display of these Resources is prohibited. No license is granted to any other TDK intellectual property right or to any third party intellectual property right. TDK disclaims responsibility for, and you agree to fully indemnify TDK, its affiliates and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these Resources.