


== NOTES ==


A : MODEL NAME, INPUT VOLTAGE RANGE, NOMINAL OUTPUT VOLTAGE, MAXIMUM OUTPUT CURRENT AND COUNTRY OF MANUFACTURE ARE SHOWN HERE IN ACCORDANCE WITH THE SPECIFICATIONS.

NAME PLATE DETAILS

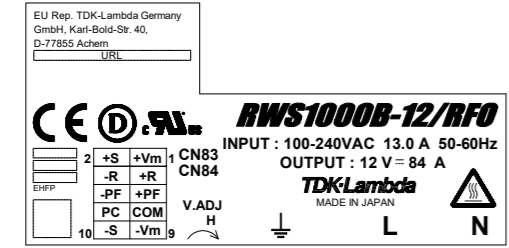


B : 8-M4 BR & COUNTERSINK ARE FOR CUSTOMER'S CHASSIS MOUNTING. (SCREW PENETRATION DEPTH 5mm MAX.)

C: SIGNAL CONNECTOR INFORMATION  
PIN CONFIGURATION AND FUNCTION OF CN83, CN84

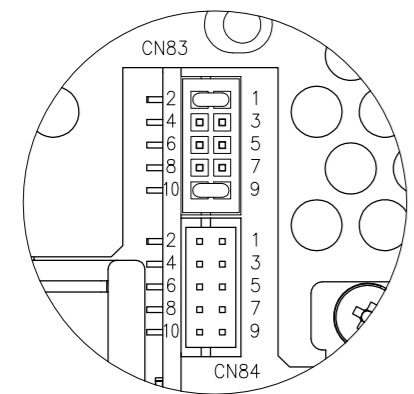

PIN No.	CONFIGURATION	FUNCTION
1	+Vm	Output monitor terminal (+V).
2	+S	Remote sensing terminal for +output.
3	+R	Remote ON/OFF control terminal.
4	-R	GND for Remote ON/OFF control terminal.
5	+PF	Power fail signal (PF signal) output terminal.
6	-PF	GND for PF signal.
7	COM	Current balance terminal.
8	PC	Current balance terminal.
9	-Vm	GND for Output monitor terminal.
10	-S	Remote sensing terminal for -output.

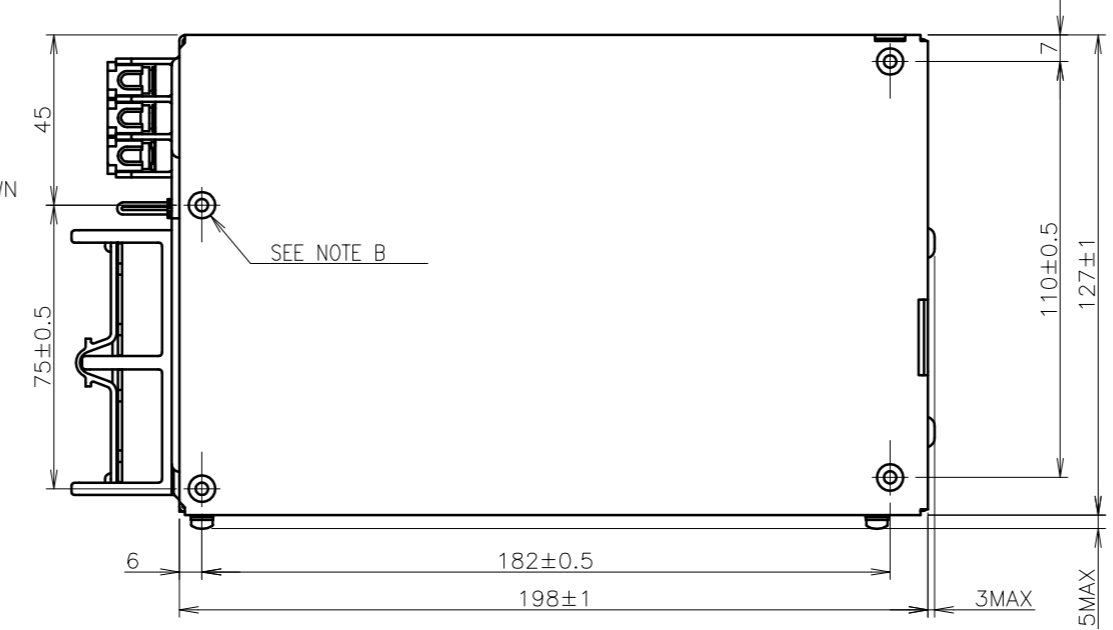

== SIGNAL CONNECTOR USED ==

PART DESCRIPTION	PART NAME	MANUFACT
PIN HEADER	S10B-PHDS	JST

== MATCHING HOUSINGS, PIN & TOOL ==

PART DESCRIPTION	PART NAME	MANUFACT
SOCKET HOUSING	PHDR-10VS	JST
TERMINAL PINS	SPHD-002T-P0.5(AWG28~24) SPHD-001T-P0.5(AWG26~22)	JST
HAND CRIMPING TOOL	YRS-620(SPHD-002T-P0.5) YC-610R(SPHD-001T-P0.5)	JST

== ACCESSORIES ==

- \* TERMINAL COVER 1 -----1  
(ATTACHED ON TERMINAL AT SHIPMENT)
- \* TERMINAL COVER 2 -----1  
(ATTACHED ON TERMINAL AT SHIPMENT)
- \* SHORT PIECE -----1  
SHORTING +Vm — +S, -Vm — -S  
(ATTACHED ON CN83 AT SHIPMENT)

(unit : mm)

MODEL NAME	RWS1000B/RFO
<b>TDK-Lambda</b>	
A273-02-01/RFO-B	